



## Filter Drier – ‘Z’ (No Braze\*) Series - Installation Guideline

After cutting connecting tubes, Clean the mating parts with cleaning pad or special wire brush

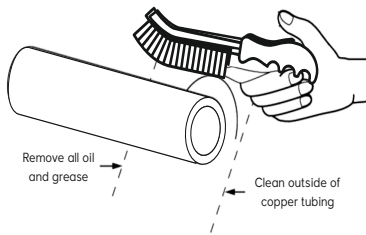


1.

Deburr and clean the inside and outside of the tube ends.

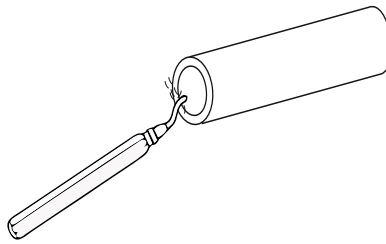


2.

Mark the insertion depth on the tube end & the Filter Drier connections for correct engagement.

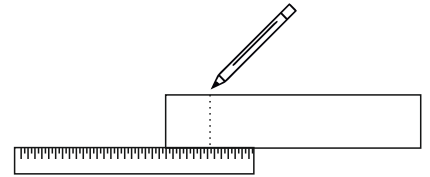


3.

Insert the press/push fitting one of the Filter Drier, ensuring they reach the marked depth.

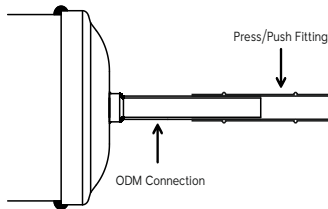


4.

Push the tubes into the Press/Push fittings at both sides of the Filter Drier until they reach the marked depth.

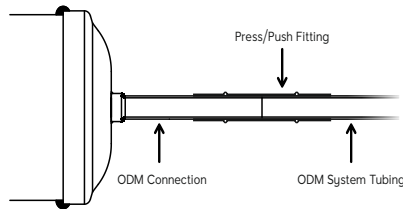


5.

Adjust and position the Press/Push tool according to the fitting size for both the refrigerant lines and Filter Drier.

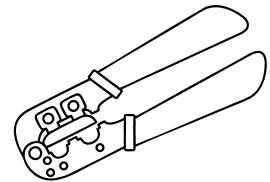


6.

Activate the Press/Push tool to compress the fittings, securing the joints between the refrigerant lines and the Filter Drier.

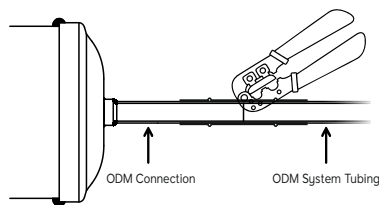

7.

Ensure the tubes are fully inserted and the connections are properly compressed around the Filter Drier and refrigerant lines.

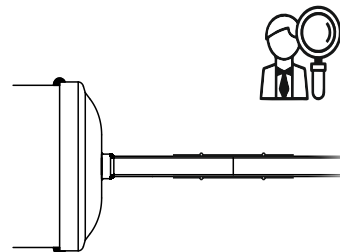

8.